



# **LOJACK ATS200** **GPS DEVICE** **INSTALLATION GUIDE**



**Toll Free Support Phone: 1-877-563-0032**

**Email: [customer\\_support@spireon.com](mailto:customer_support@spireon.com)**

## Powering up the device:

- Locate the physical button located on the top side of the device
- Press and hold the button for 3 to 5 seconds until both Green and Blue LEDs are
- blinking.

## LEDs

The ATS200 has two LED indicators


**Green LED:** indicates cellular connection status

- Blinking: after power up, 1-second blink to indicate registering on the network
- Blinking: transitioning to 2-second blink and wait for GPS lock
- Off: LED will be turned off after initial event is being sent out
- Blinking: after power up, 1-second blink to indicate registering on the network

**Blue LED:** indicates GPS status

- Blinking: after power up, 1-second blink to indicate acquiring GPS data
- Off: LED will be turned off after GPS data is acquired

## Diagram / Orientation

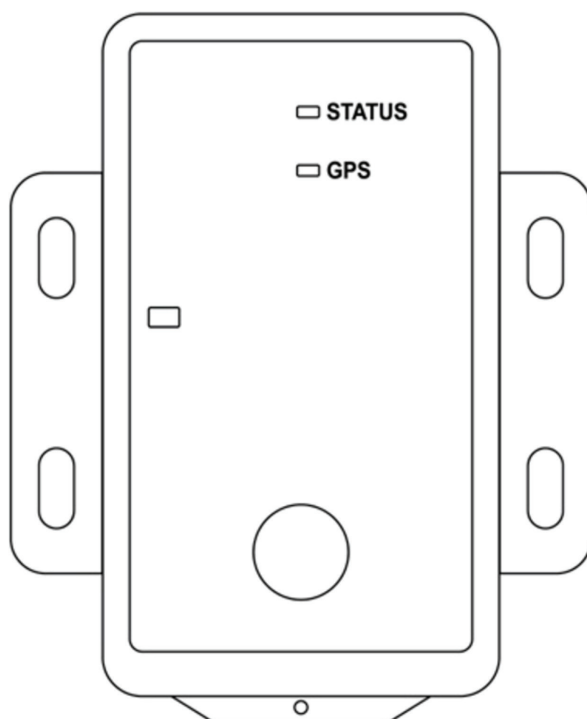

## Mounting Locations

- The device should be mounted where the front face is facing upwards and locate as high as possible for optimum signal
- The best orientation is the top lid facing upwards
- Some examples:
  - Behind the knee bolster
  - Behind the glove box
  - Under the rear deck above the metal support structure

## Mounting Options

- Use the supplied mounting bracket and thread the zip ties through the holes (Shown above) and secure into position.
- Use the supplied mounting bracket and firm mount the device using screws.
- The device should be mounted in a vertical position as high as possible for optimum signal.
- Ensure the device is not mounted below any metal obstructions.
- The device should be mounted away from any moving parts (steering shaft, tilt column, pedals).

